

PARTS LIST

BC360HE

CONTENTS

1. MAIN BODY	1 ~ 2
2. GEARCASE	3 ~ 4
3. ENGINE.....	5 ~ 8
4. CARBURETOR, FUEL TANK	9 ~ 10
5. ACCESSORIES	11 ~ 12


2021.03.



MARUYAMA


P/N 525173

1. BC360HE MAIN BODY

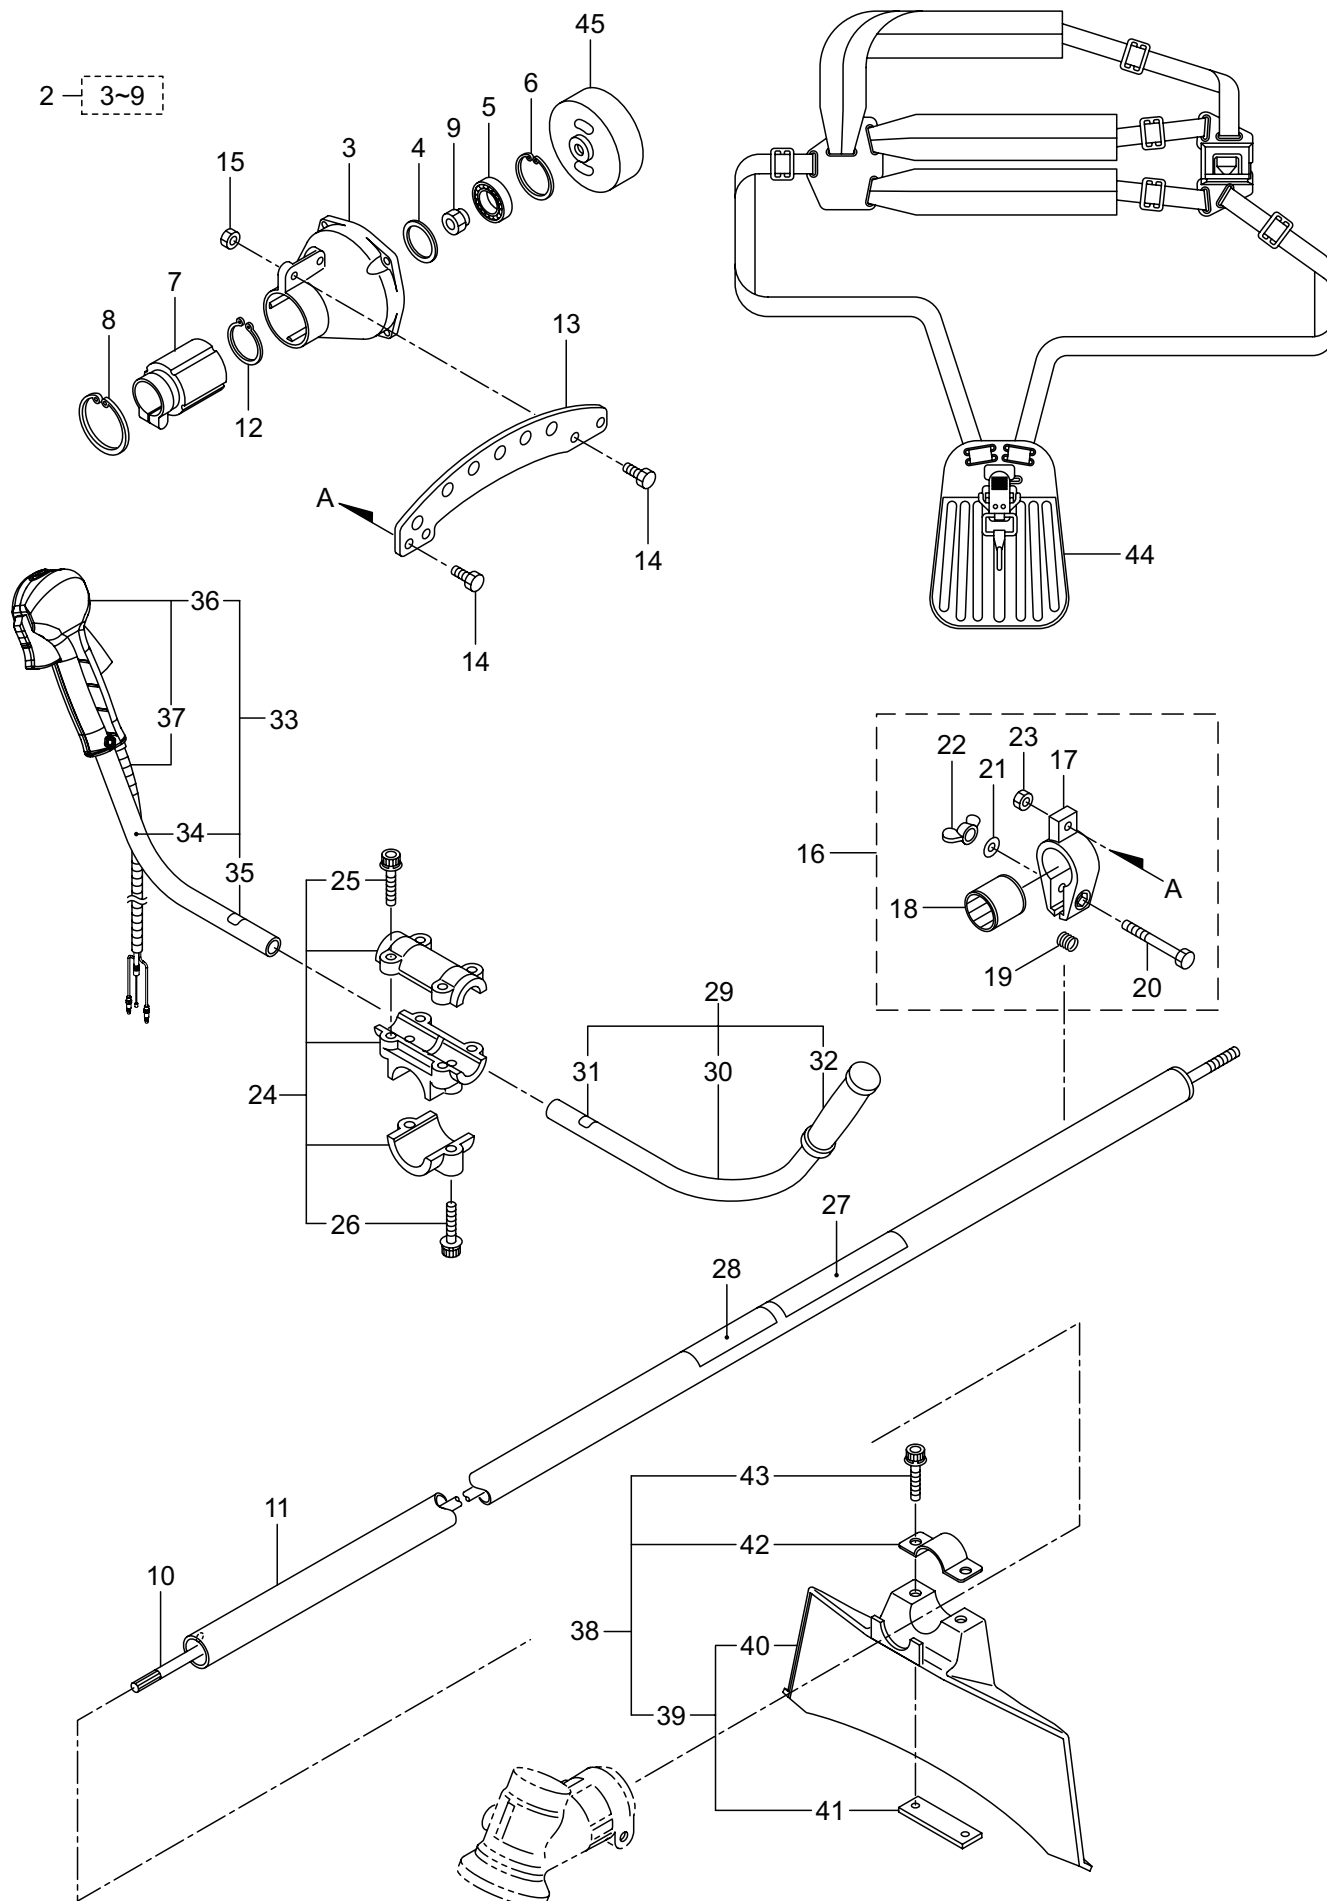


Ref. No.	Parts No.	Parts Name	Q'ty	Remarks
1-1	366153	BC360HE	1	
1-2	560840	Clutch Case Ass'y	1	Incl.3-9
1-3	560841	Clutch Case	1	
1-4	560842	Washer	1	31.5x23xt1.2
1-5	560843	Bearing	1	
1-6	016732	Snap Ring	1	#32
1-7	560884	Driveshaft Tube Adapter	1	
1-8	065601	Snap Ring	1	#45
1-9	560848	Fitting	1	
1-10	560847	Driveshaft	1	
1-11	560849	Driveshaft Tube	1	
1-12	140149	Snap Ring	1	#28
1-13	560851	Hanger Arm	1	
1-14	560852	Bolt	3	M6x12
1-15	560853	Nut	2	M6
1-16	560854	Clamp Ass'y	1	Incl.17-23
1-17	560887	Clamp	1	
1-18	560888	Spacer	1	
1-19	560889	Spring	1	
1-20	560890	Bolt	1	M6x45
1-21	560891	Washer	1	M6
1-22	560892	Wing Nut	1	M6
1-23	560853	Nut	1	M6
1-24	560733	Bracket Ass'y	1	Incl.25,26
1-25	560758	Cap Screw	4	M6x25
1-26	560487	Cap Screw	2	M6x30
1-27	560855	Label	1	BC360HE
1-28	560856	Label	1	Caution
1-29	560879	Handle (A) Ass'y-Left	1	Incl.30-32
1-30	560880	Handle (A)	1	
1-31	560522	Label	1	
1-32	560527	Handle Grip	1	
1-33	560881	Handle (B) Ass'y-Right	1	Incl.34-37
1-34	560882	Handle (B)	1	
1-35	560522	Label	1	
1-36	560901	Throttle Trigger Ass'y	1	Incl.37
1-37	560902	Wire Ass'y	1	
1-38	560528	Safety Cover Ass'y	1	Incl.39-43
1-39	560529	Safety Cover Ass'y	1	Incl.40,41
1-40	560530	Safety Cover	1	
1-41	560531	Metal Fitting	1	
1-42	560532	Retainer	1	
1-43	560487	Cap Screw	2	M6x30
1-44	560583	Shoulder Band Ass'y	1	
1-45	560845	Clutch Drum	1	

2. BC360HE GEARCASE

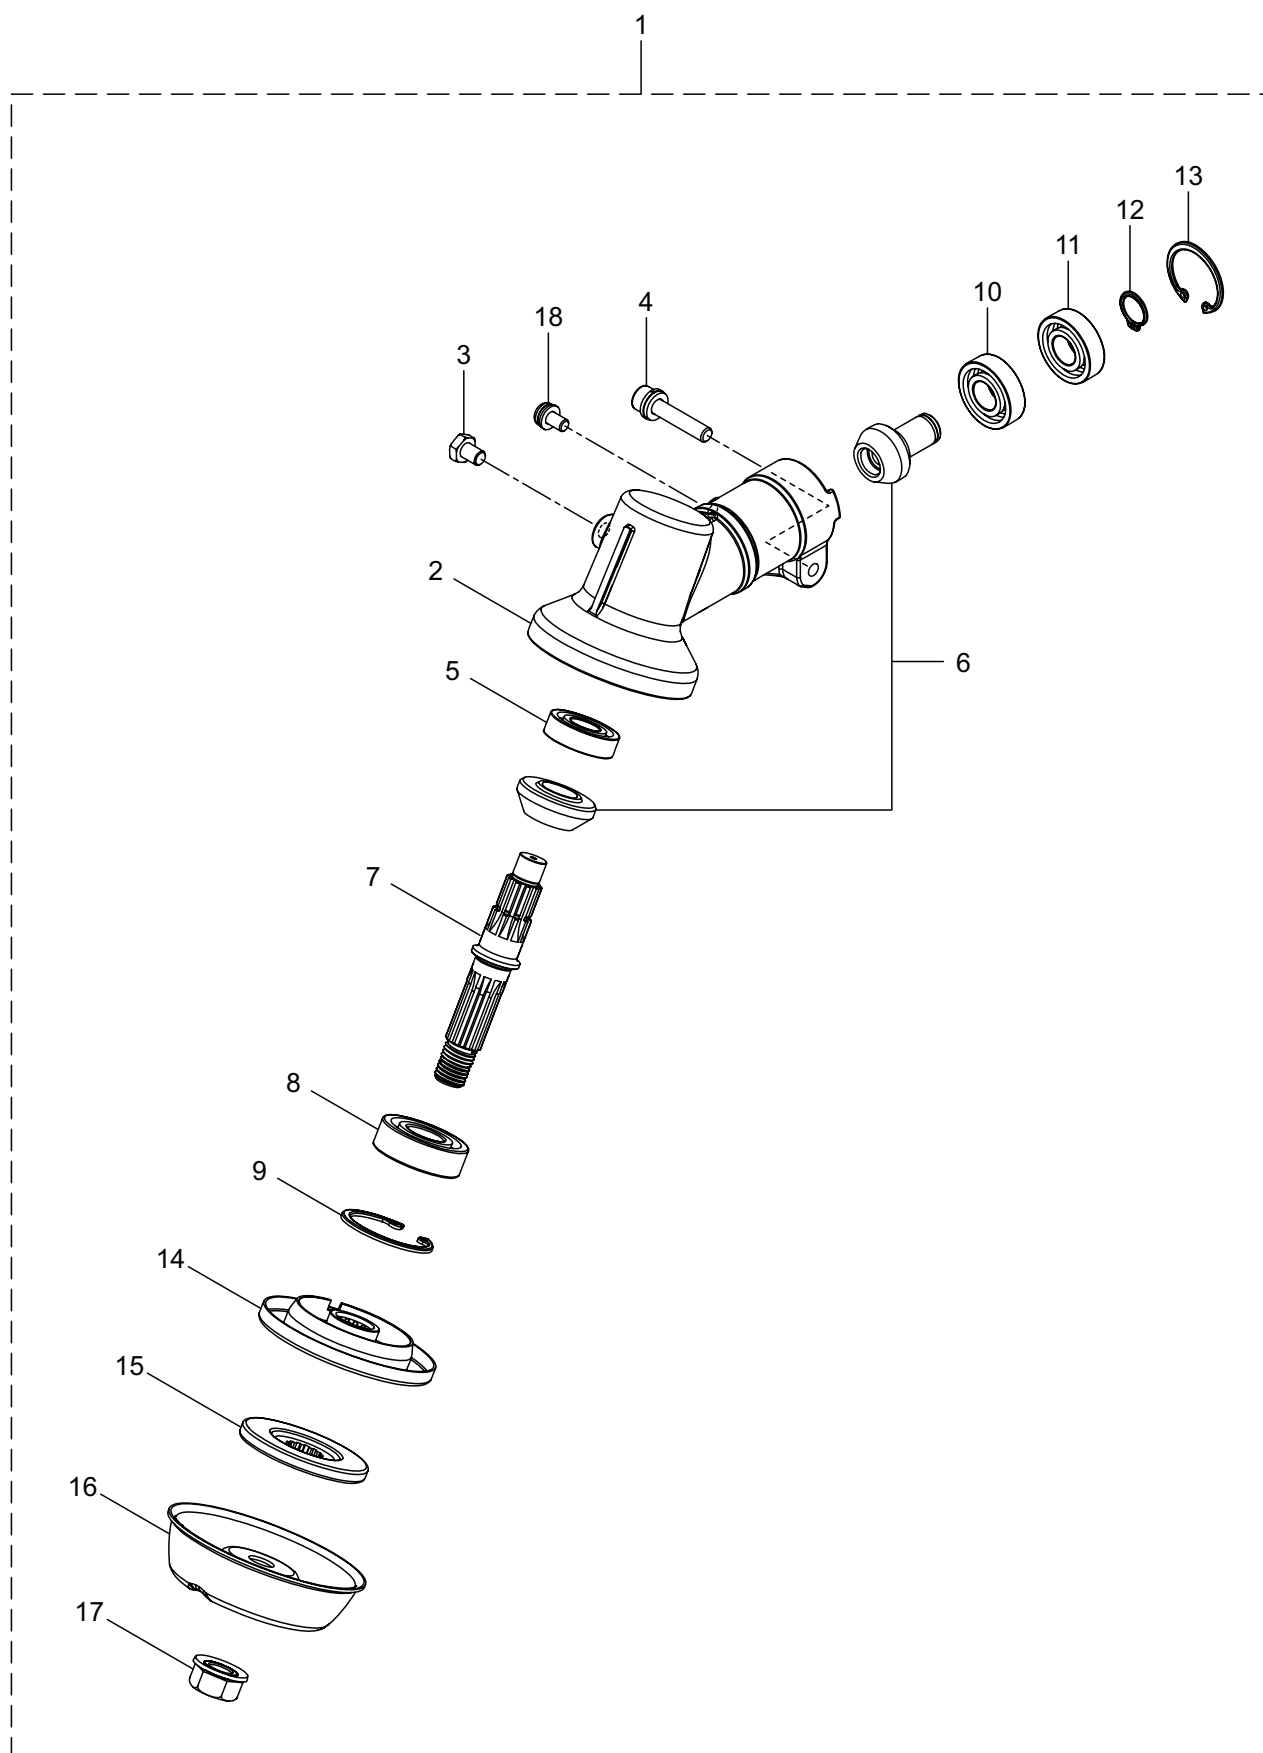


Ref. No.	Parts No.	Parts Name	Q'ty	Remarks
2-1	560502	Gearcase Ass'y	1	Incl.2-18
2-2	560503	Gearcase	1	
2-3	560504	Bolt	1	M6x8
2-4	560487	Cap Screw	1	M6x30
2-5	019585	Bearing	1	#6001
2-6	560514	Gear Set	1	
2-7	560506	Blade Shaft	1	
2-8	222442	Bearing	1	#6202 2RS
2-9	012380	Snap Ring	1	#35
2-10	019585	Bearing	1	#6001
2-11	058995	Bearing	1	#6001Z
2-12	055186	Snap Ring	1	#12
2-13	055185	Snap Ring	1	#28
2-14	560508	Bracket (A) Ass'y	1	
2-15	560511	Bracket (B)	1	
2-16	560512	Stabilizer	1	
2-17	232920	Blade Locking Nut	1	M10x1.25
2-18	560486	Screw	1	M5x10

3. BC360HE ENGINE

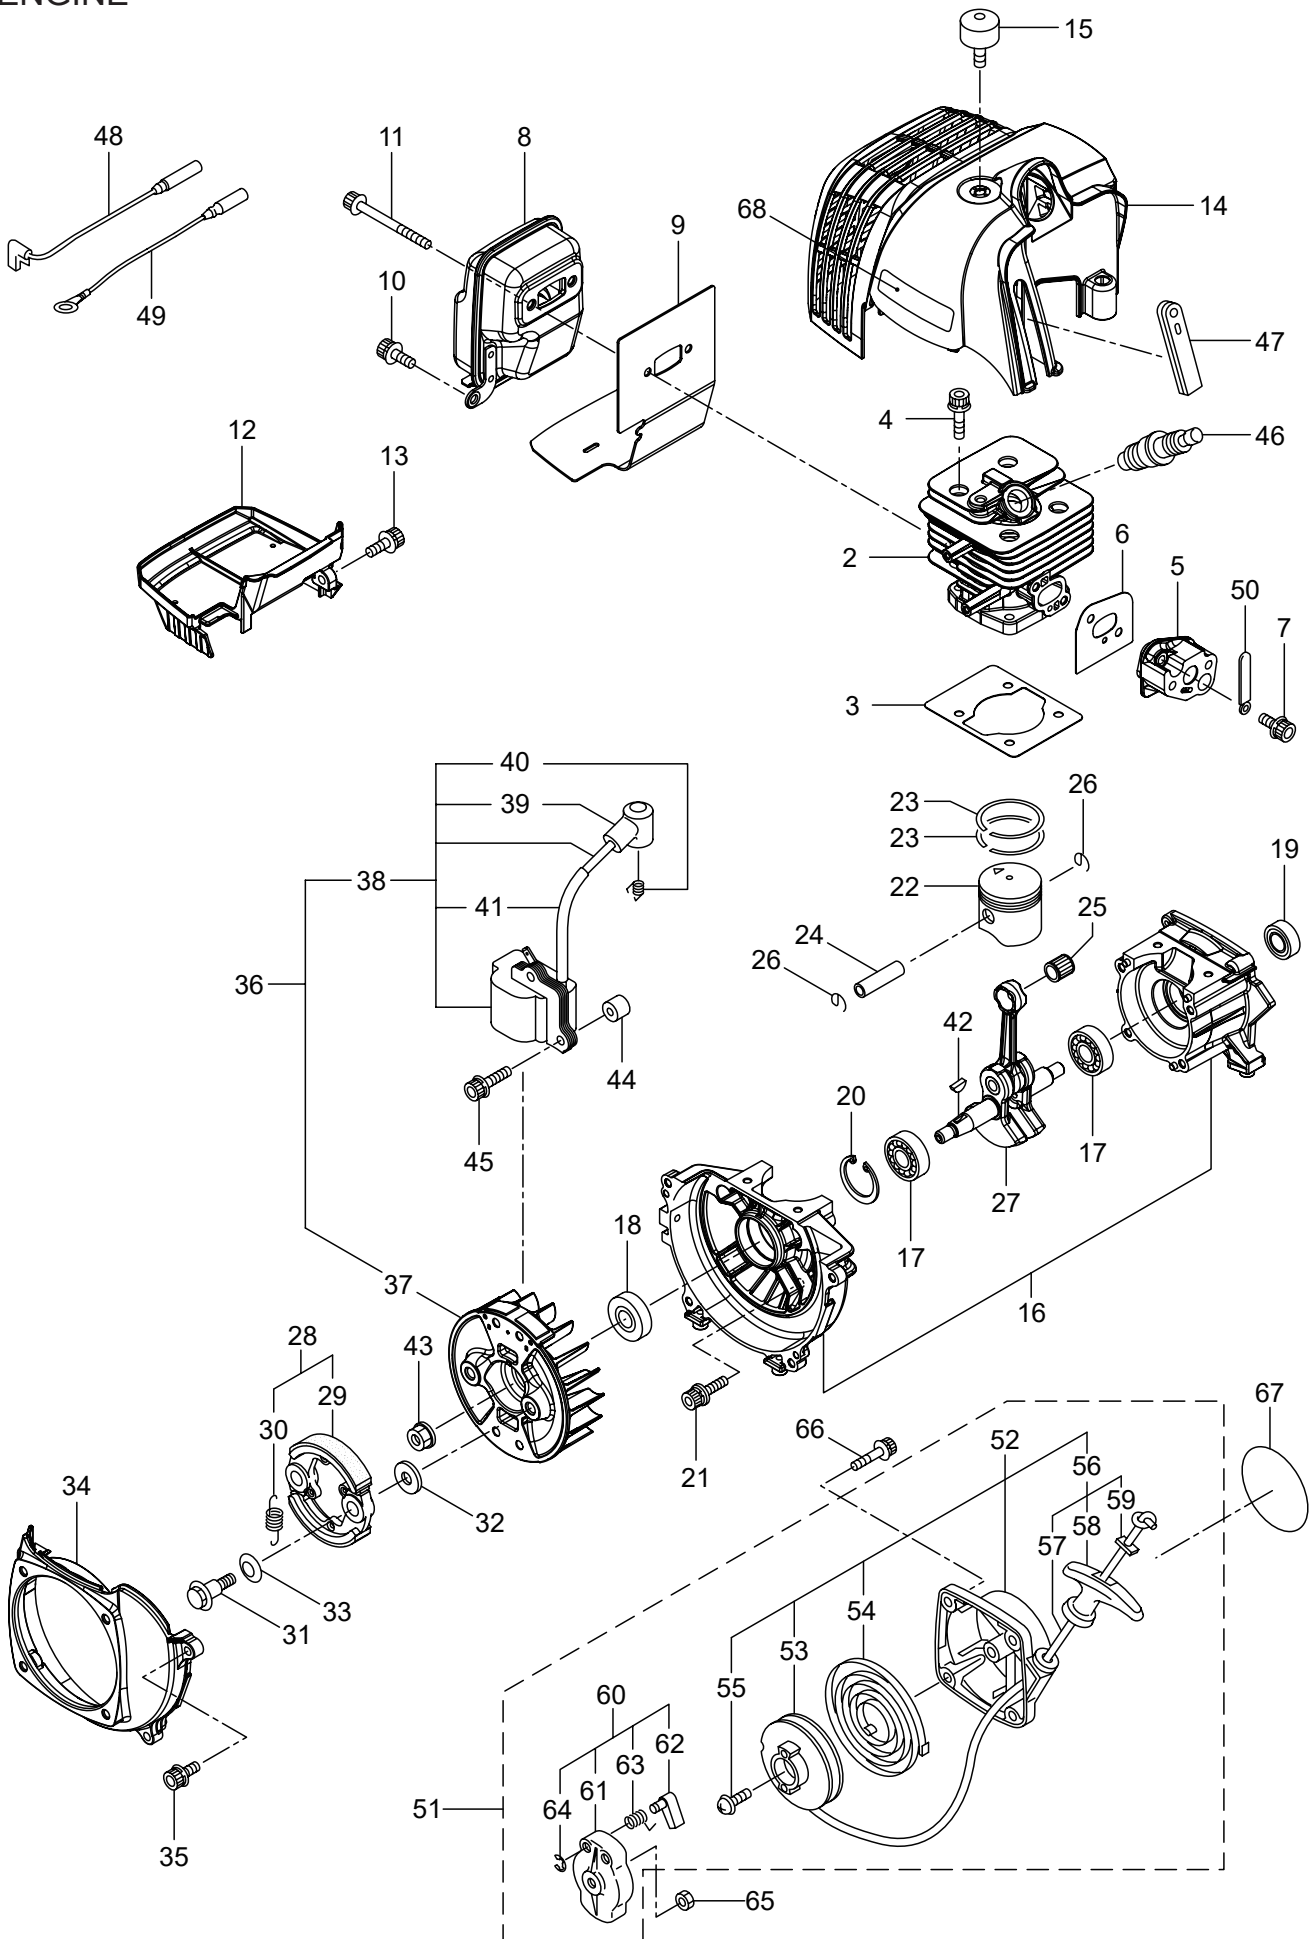


Ref. No.	Parts No.	Parts Name	Q'ty	Remarks
3-1	875335	Engine	1	FE360TH/05
3-2	279490	Cylinder	1	New gasket required
3-3	279574	Gasket	1	
3-4	261250	Cap Screw	4	M5x20
3-5	279669	Insulator	1	New gasket required
3-6	279671	Gasket	1	
3-7	265924	Cap Screw	2	M5x25WSW
3-8	279714	Muffler Comp.	1	
3-9	279886	Gasket	1	
3-10	261607	Cap Screw	1	M5x16WSW
3-11	266713	Cap Screw	2	M5x60
3-12	279767	Under Cover	1	
3-13	261607	Cap Screw	1	M5x16WSW
3-14	279770	Top Cover Comp.	1	
3-15	285843	Knob Bolt	1	
3-16	279498	Crankcase	1	
3-17	261384	Bearing	2	6201 C3
3-18	261385	Oil Seal	1	
3-19	563632	Oil Seal	1	
3-20	016732	Snap Ring	1	#32
3-21	261612	Cap Screw	4	M5x30
3-22	279357	Piston	1	
3-23	246102	Piston Ring	2	(2)Required
3-24	265068	Piston Pin	1	
3-25	265225	Bearing, Needle	1	
3-26	261393	Clip, Piston	2	
3-27	279329	Crankshaft/Conn.Rod Ass'y	1	
3-28	247529	Clutch Ass'y	1	Incl.29,30
3-29	247463	Clutch Shoe	2	(2)Required
3-30	246718	Spring, Clutch	1	
3-31	246377	Clutch Bolt	2	M8x1.25
3-32	262683	Washer	2	8x22x1.2
3-33	262682	Wave Washer	2	
3-34	279702	Fan Cover	1	
3-35	261250	Cap Screw	4	M5x20
3-36	563598	Magneto Ass'y	1	Incl.37-41
3-37	279362	Rotor/Fan	1	
3-38	246195	Ignition Coil Ass'y	1	Incl.39-41
3-39	283178	Plug Boot	1	
3-40	272805	Connector	1	
3-41	283272	Insulator	1	
3-42	261076	Woodruff Key	1	3x10
3-43	261417	Nut, Rotor	1	M8
3-44	280381	Spacer	2	
3-45	261256	Cap Screw	2	M4x25

3. BC360HE ENGINE

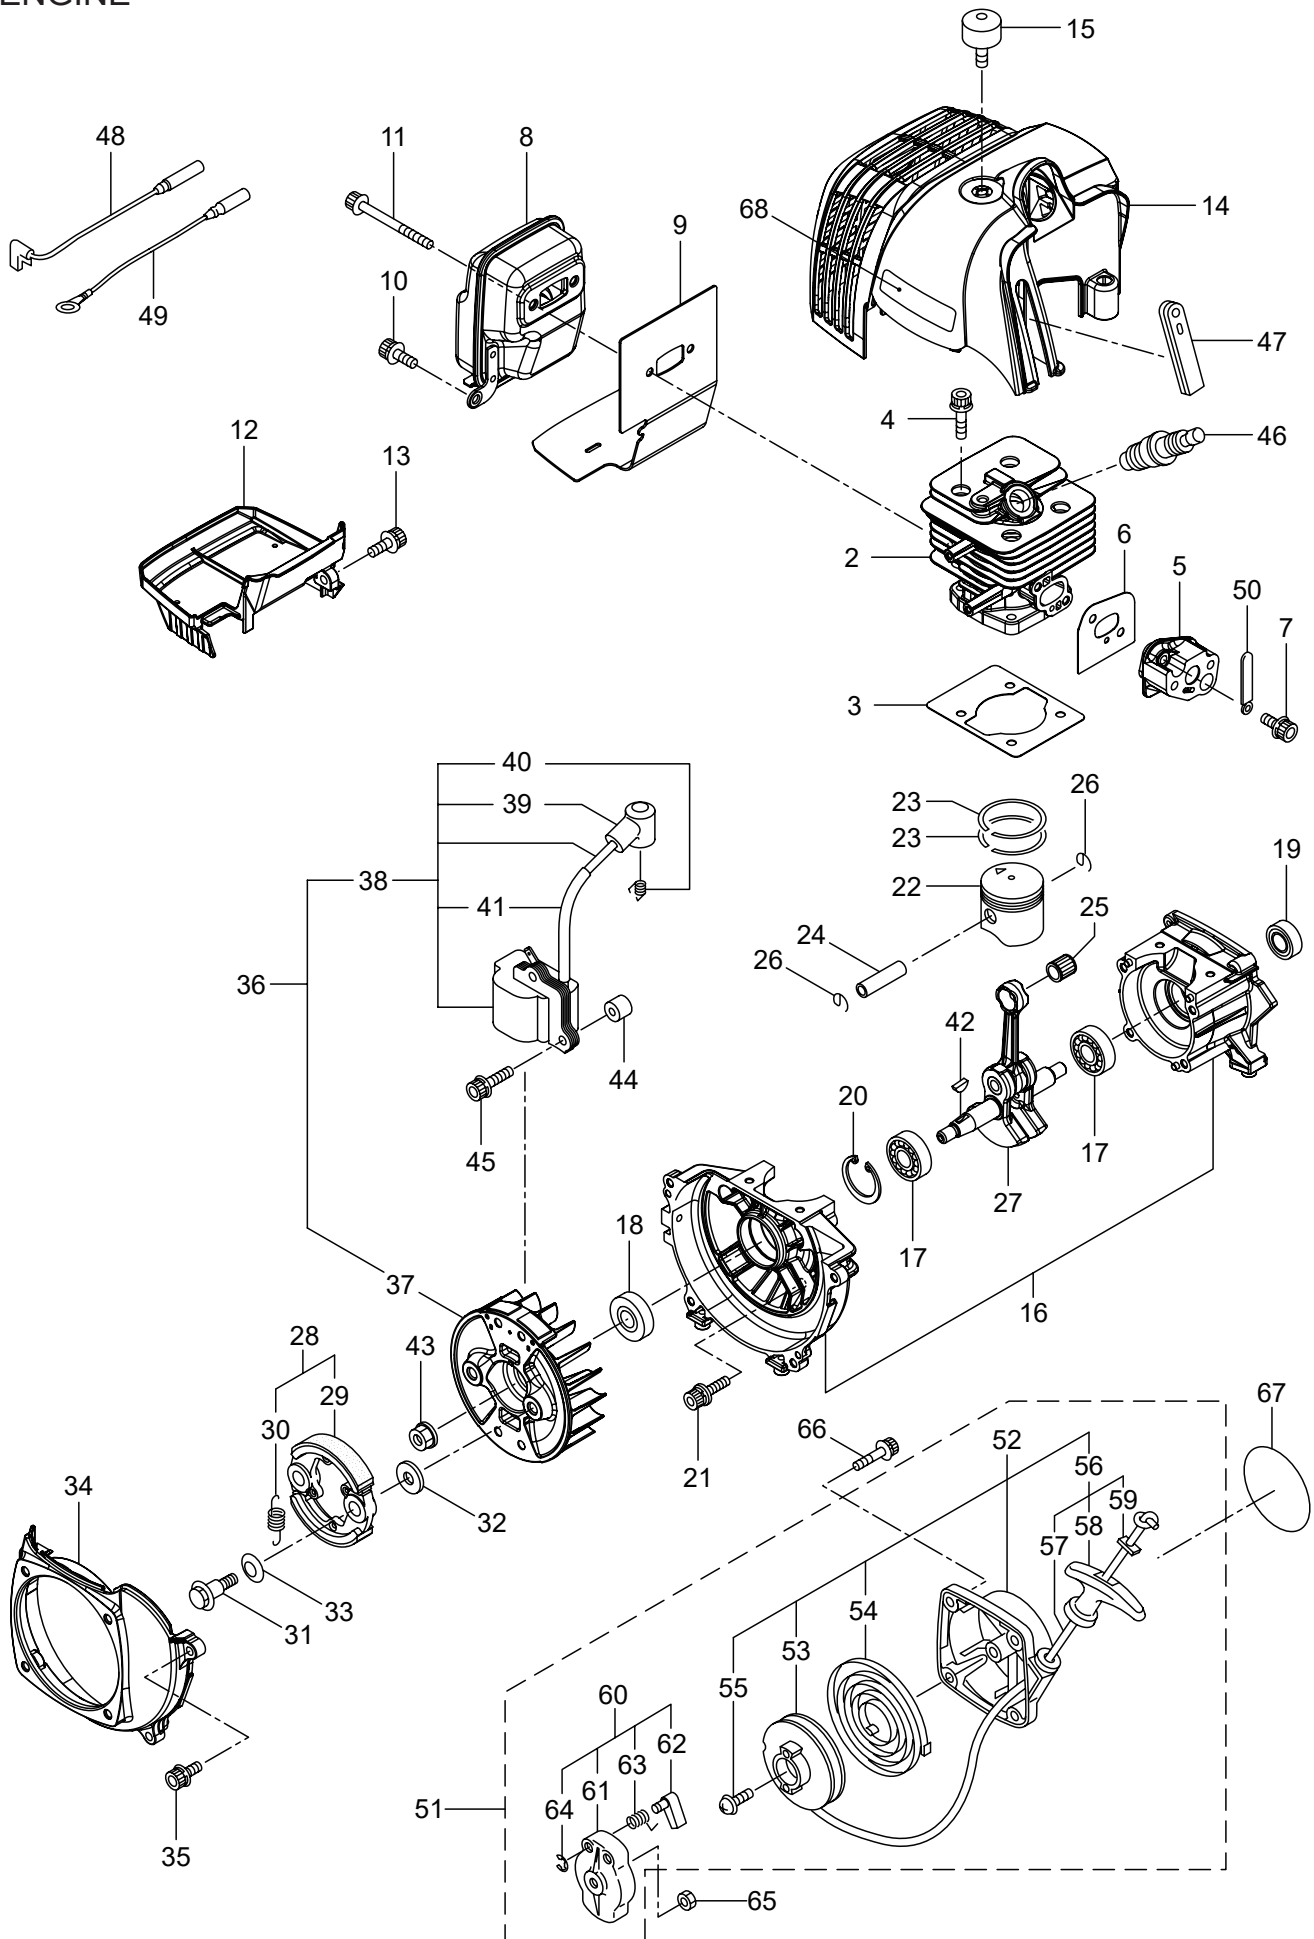



Ref. No.	Parts No.	Parts Name	Q'ty	Remarks
3-46	285982	Spark Plug	1	BPM8Y
3-47	286988	Grommet	1	
3-48	269722	Wire, Lead	1	
3-49	284541	Wire, Lead	1	
3-50	264588	Clamp	1	
3-51	563607	Recoil Starter Ass'y	1	Incl.52-64
3-52	246299	Recoil Ass'y	1	Incl.53-59
3-53	279893	Reel	1	
3-54	279894	Spiral Spring	1	
3-55	279895	Screw	1	
3-56	246300	Rope Ass'y	1	Incl.57-59
3-57	246435	Starter Rope	1	
3-58	287651	Starter Grip	1	
3-59	283511	Rope Stopper	1	
3-60	261421	Starter Pawl Ass'y	1	Incl.61-64
3-61	261726	Pawl Case	1	
3-62	261727	Pawl	1	
3-63	261728	Return Spring	1	
3-64	020299	E-Ring	1	#4
3-65	285736	Nut	1	M8
3-66	281211	Cap Screw	4	M4x20WSW
3-67	563771	Label	1	58 FE360
3-68	563701	Label	1	

4. BC360HE CARBURETOR, FUEL TANK

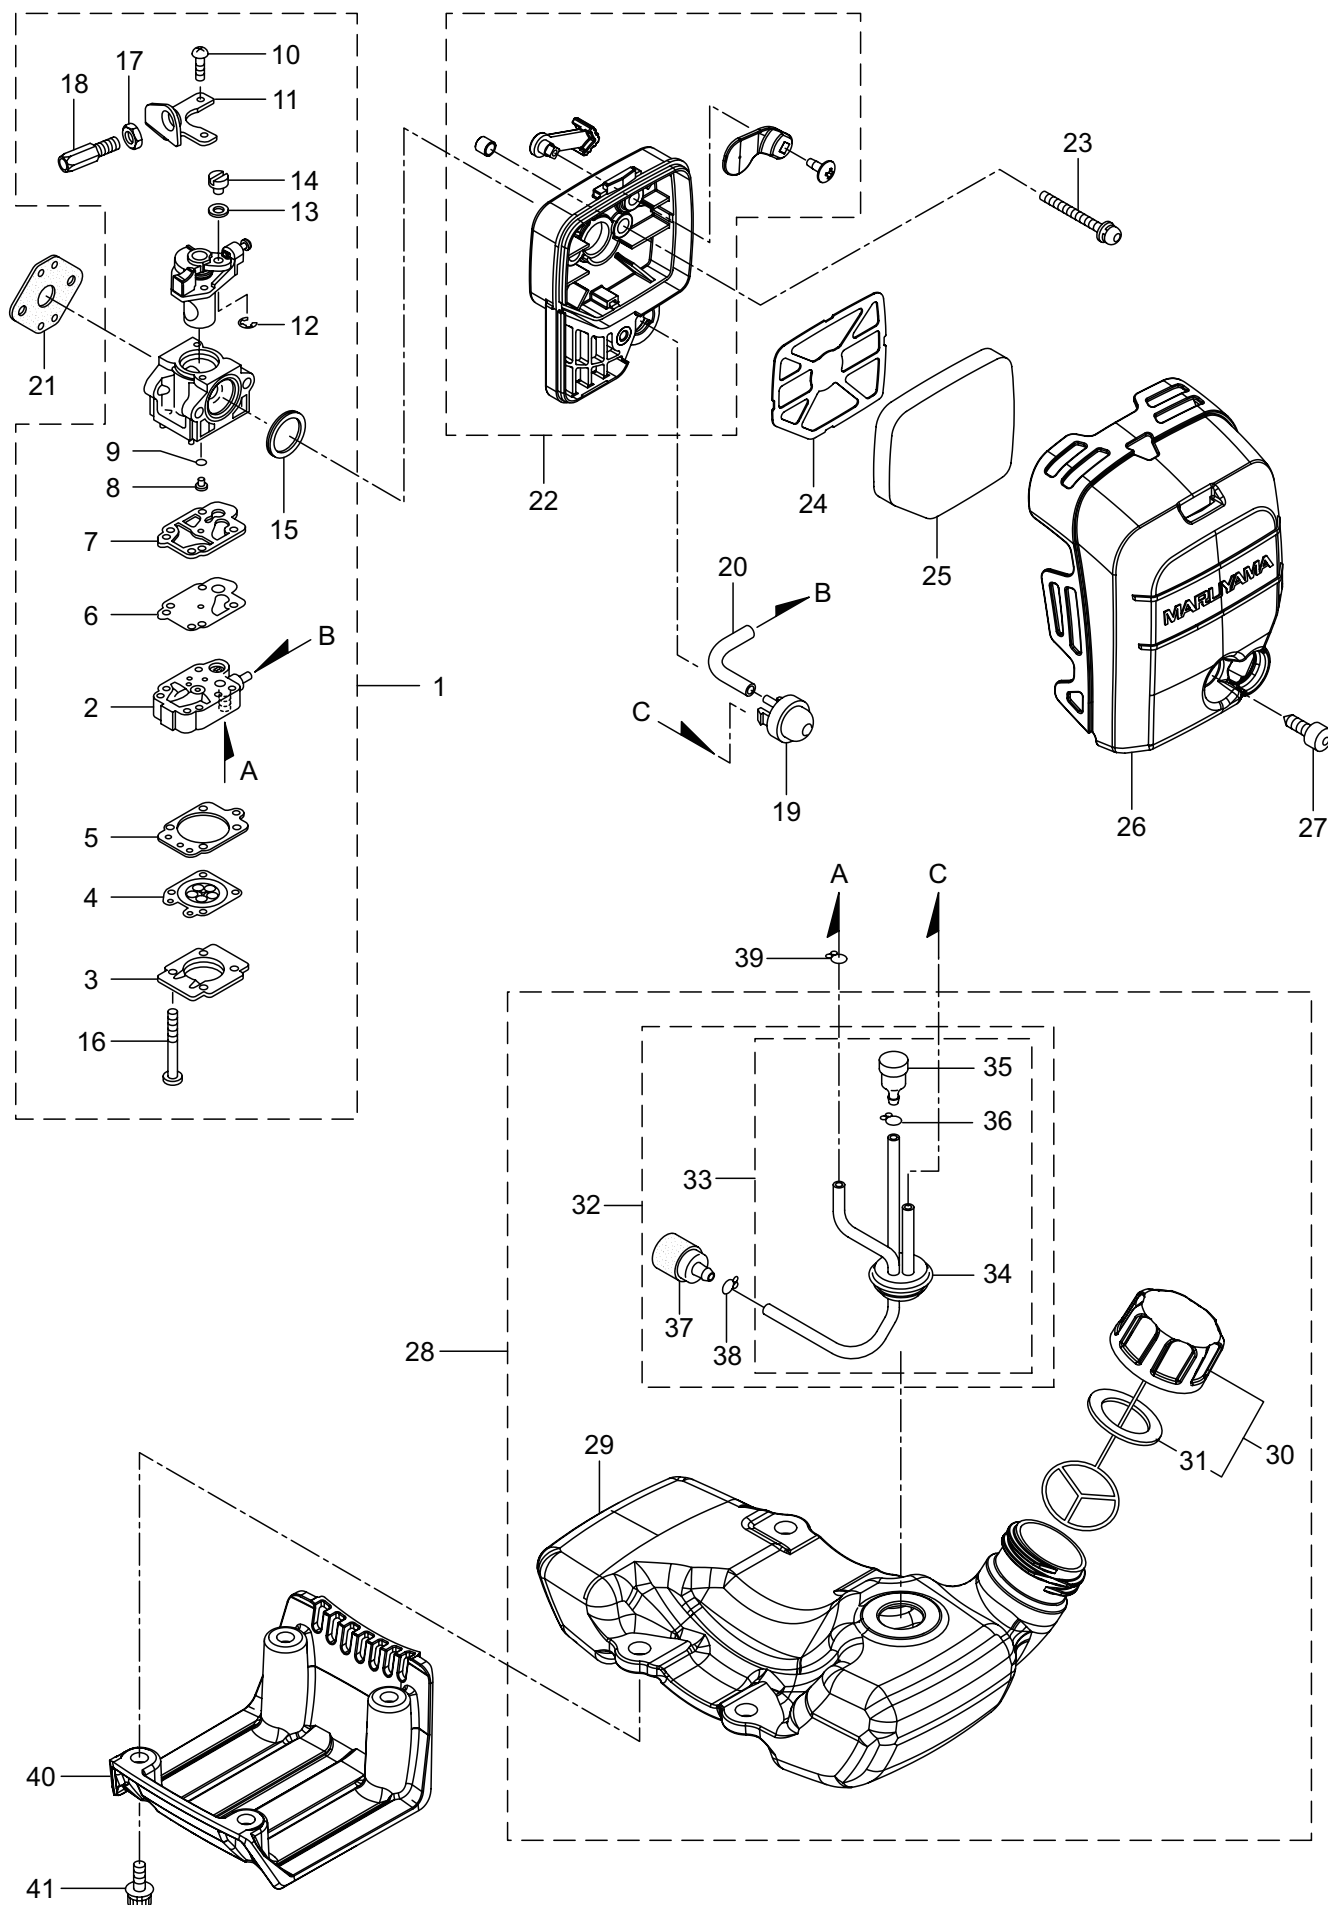

Ref. No.	Parts No.	Parts Name	Q'ty	Remarks
4-1	279777	Carburetor Ass'y	1	Incl.2-18
4-2	246365	Pump Body	1	
4-3	263726	Cover Plate	1	
4-4	283905	Diaphragm, Meterring	1	
4-5	263727	Gasket	1	
4-6	262994	Diaphragm, Fuel Pump	1	
4-7	282576	Gasket	1	
4-8	281486	Main Jet	1	
4-9	261871	O-Ring	1	
4-10	261875	Screw	2	
4-11	264677	Bracket	1	M6
4-12	261876	E-Ring	1	
4-13	264678	Washer	1	
4-14	261658	Swivel	1	
4-15	261657	Packing	1	
4-16	263737	Screw	4	
4-17	261878	Nut	1	
4-18	263994	Adapter	1	
4-19	282299	Pump	1	
4-20	279839	Pipe	1	
4-21	262587	Gasket	1	M5x55WSW
4-22	279778	Case Ass'y	1	
4-23	262720	Cap Screw	2	
4-24	279783	Screen	1	
4-25	279784	Element	1	
4-26	279786	Cleaner Cover	1	Incl.29-38
4-27	286349	Knob Bolt	1	
4-28	563586	Fuel Tank Ass'y	1	
4-29	279790	Fuel Tank	1	Incl.31
4-30	275306	Fuel Tank Cap Ass'y	1	
4-31	274875	Gasket	1	Incl.33-38 Incl.34-36
4-32	563588	Fuel Pipe Pick-up Ass'y	1	
4-33	246118	Fuel Pipe Ass'y	1	
4-34	268065	Grommet	1	
4-35	261590	Breather Ass'y	1	
4-36	261117	Clip	1	M5x18WSW
4-37	277887	Fuel Filter Ass'y	1	
4-38	563014	Clip	1	
4-39	563014	Clip	1	
4-40	279674	Stand	1	
4-41	268940	Cap Screw	4	

5. BC360HE
ACCESSORIES

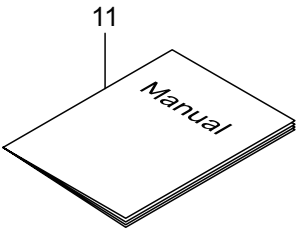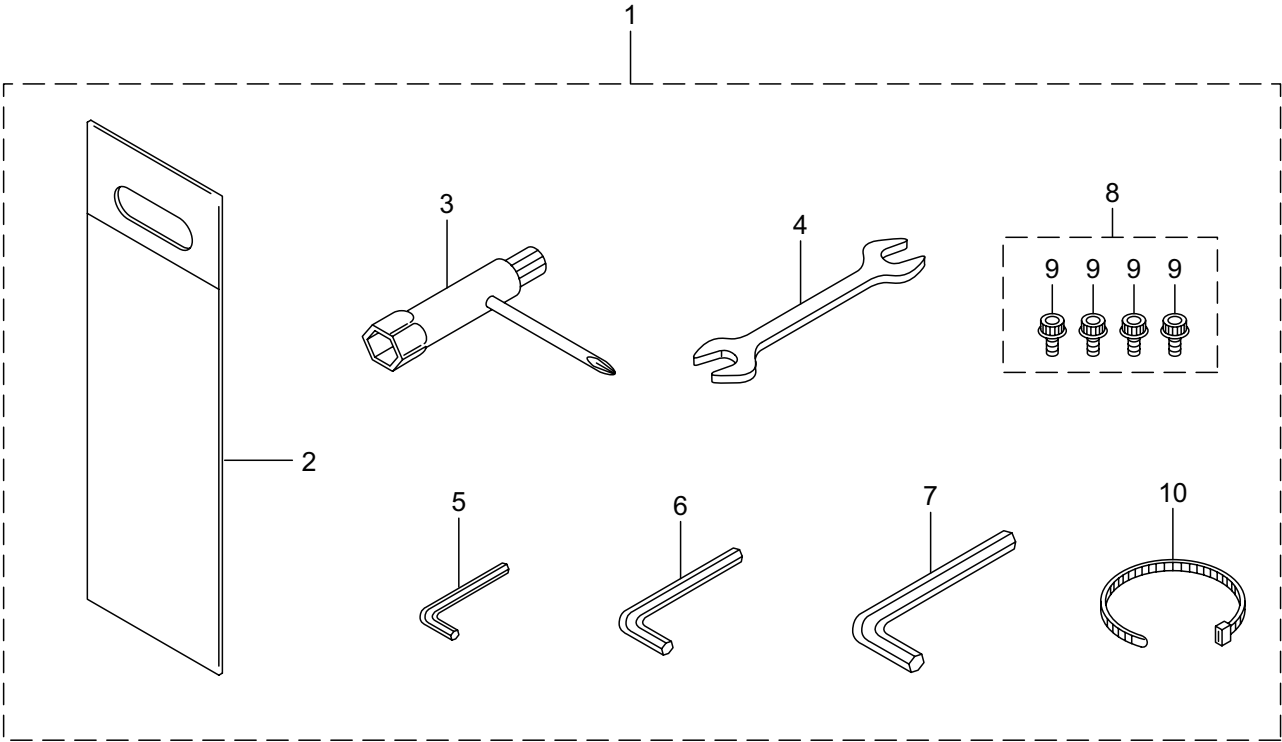

Ref. No.	Parts No.	Parts Name	Q'ty	Remarks
5-1	560885	Tool Set	1	Incl.2-10
5-2	560535	Tool Bag	1	
5-3	560536	Box Spanner	1	17x19x(+)
5-4	560537	Double-ended Wrench	1	8x10
5-5	560538	Wrench	1	3mm
5-6	560539	Wrench	1	4mm
5-7	560540	Wrench	1	5mm
5-8	560886	Bolt Set	1	Incl.9
5-9	560487	Cap Screw	4	M6x30
5-10	560543	Band	2	8x133L
5-11	560858	Instruction Manual	1	BC360HT/36/42HE